 


mistral

9" High Velocity Fan MHV1010DR

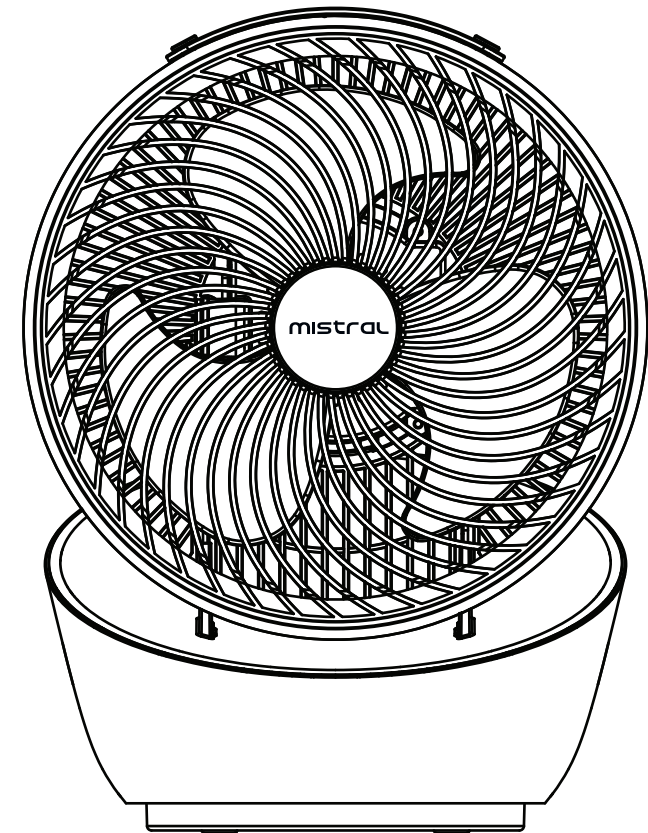

Please read this instruction manual thoroughly before operating and keep it for future reference

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at <https://khindonline.com/login>

MAYER MALAYSIA SDN BHD

Customer Service Hotline: 1800-88-0032

Service Centre Operating Hours:

8.30am – 6.00pm (Monday - Friday)

Closed on Saturday, Sunday and Public Holidays

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

Waranti & Perkhidmatan Pelanggan

IMBAS UNTUK



E-Waranti

Pendaftaran e-Waranti di <https://khindonline.com/login>

MAYER MALAYSIA SDN BHD

Hotline Perkhidmatan Pelanggan: 1800-88-0032

Waktu Operasi Pusat Perkhidmatan:

8.30am – 6.00pm (Isnin-Jumaat)

Ditutup pada hari Sabtu, Ahad dan Cuti Umum

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use the appliance only for its intended purpose as described in this manual.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Supply cord or appliance replacement and repairs must be done at the Service Centre, for repair or mechanical adjustment or services.
- Please ensure that the fan is switched off from the supply mains before any maintenance and before removing the guard.
- When you are going to move the fan or not in use, please cut off the power and unplug the plug.
- Unplug the plug outlet when not in use and before cleaning.
- Insert the power cord only into an grounded socket.
- Do not let the appliance touch any hot surfaces.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- To avoid the possibility of fire disaster, do not cover the appliance.
- Please make sure that the appliance must be upright at all times, and do not leave it facing down or lying by the side.
- Unplug the appliance from the socket when you do not use it. Please do not pull on the cord.
- To avoid electric shock, do not place the cord, the plug or the appliance in water or other liquids.
- Close supervision is necessary when the appliance is used by or near the children. Do not insert the fingers or other objects into the fan during operation. Especially take care of the children.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Do not place the appliance on an unsteady or cloth covered surface.
- The elderly, children or persons physically unwell may feel unwell if used for extended periods.
- Do not spray any detergent including bug or mosquito killer into the fan to prevent damages to the material.
- The appliance is for household use only. Do not use at outdoors or for any commercial or industrial purpose.
- Do not hang or mount fan on a wall or ceiling.
- Do not operate if the fan housing is damaged.

CLEANING AND MAINTENANCE

- Always turn off and unplug the fan before cleaning.
- This appliance cannot be immersed in water to clean. You may take out the fan guard and fan blade to clean, but the other parts (inclusive of motor parts) should not come in contact with water as this is hazardous.
- Use only a soft, damp cloth to gently wipe the outer surfaces of the fan clean.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- For storage, you may leave the fan assembled and covered to protect it from dust. Store the fan in a cool, dry, place.

Cleaning fan guard and fan blade

- Unscrew the screw at screw hole for front guard to remove the front guard. The screw whole can be found on the top and at the back.
- After removing the screw, from the front, slightly turn the front guard anti-clockwise until you feel the catch has been released, then pull to take out the front guard.
- To take out the nut, turn it in clockwise direction to loosen and unscrew it.
- Pull out the fan blade to take it out.
- After cleaning the front guard and fan blade, ensure that they are thoroughly dried before putting and assembling them back into the fan.


Note:

- The back guard cannot be removed for washing. Please only use a soft, damp cloth to gently wipe the surface of the back guard clean.
- Ensure that the appliance is properly assembled before turning on to operate it again.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MHV1010DR	220-240V ~ 50-60Hz	21W	21 m ³ /min	7.5 m/min

INTRODUCTION OF PARTS

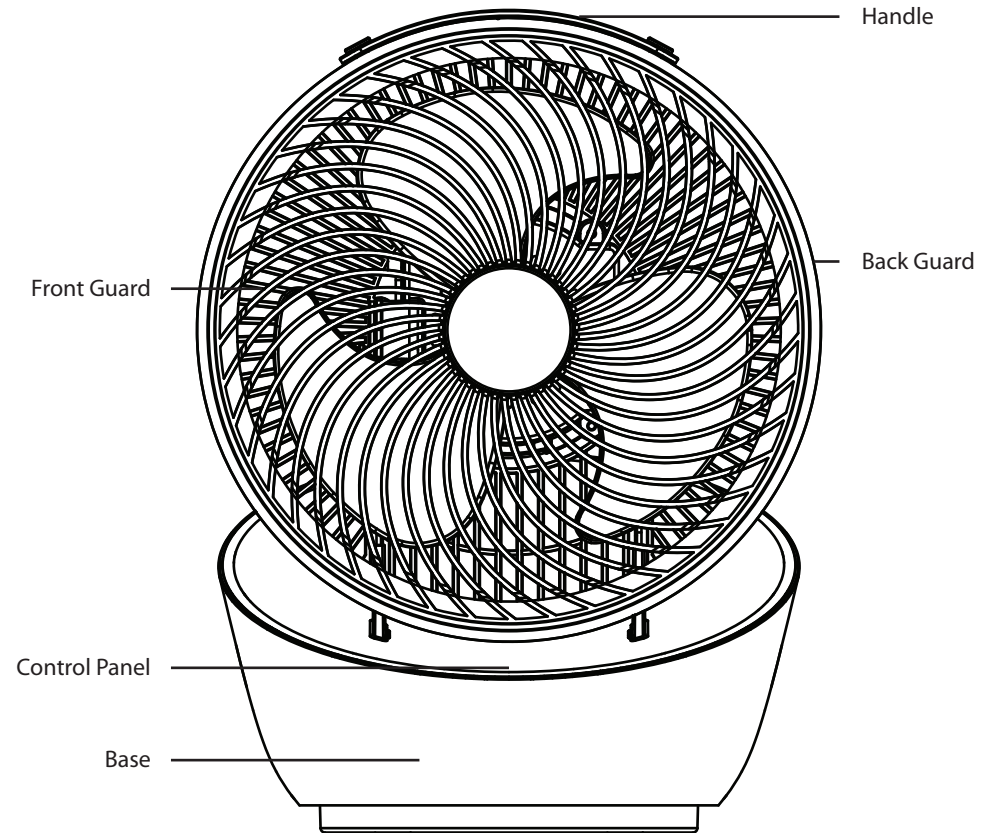


CONTROLS AND OPERATIONS

Control Panel



 Remote Control

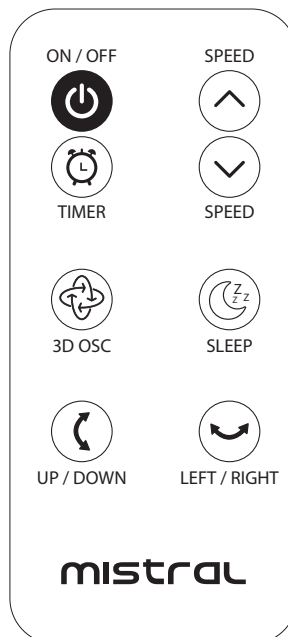

Operation:

Power

- Check the household voltage to ensure it matches the appliance's rated specification. Be sure to plug into a 220-240V ~ 50-60Hz outlet.
- Put in the plug, you can hear a beep, and the LED display show the room temperature, then press the power button "⏻" to start.

Speed:

- 12 speeds can be adjusted but pressing the speed buttons "⬆" to increase and "⬇" to decrease, when you chose a speed, the number will show in the display window, after few second, the speed number will be fixed.

Sleep:

- Press the "🌙", you can choose the sleep mode.

Timer:

- Product has be setting on 1H/2H/3H/4H/5H/6H/7H/8H.
- Press the "🕒", When you press timer, the LED display window will show the timer hours number, and the Indicator light will on.

Oscillation:

- Press the "↔", the product will oscillate left and right by automatic.
- Press the "↕", the product will swing up and down automatically.
- Press the "🌀", for 3D oscillation, the product will swing left, right, up, and down. When this function is selected, the fan will operate at speed 12.

Lighting

- When the machine is operating but all buttons are not operated withi, the brightness of the indicator will dim to 50% brightness.
- Press any button to remove this function, and the corresponding indicator light will be brighten back to 100%.

Remote Control:

- The remote control has the same function as the control panel.
- Please make the fan plug out if do not use for long time.