


mayer

Mini Rechargeable USB Food Chopper MMFC05

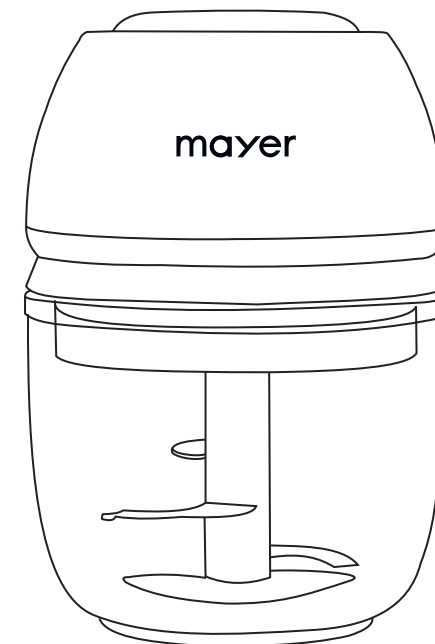

Please read this instruction manual thoroughly before operating and keep it for future reference

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.khind.com.my/e-warranty.html

MAYER MALAYSIA SDN BHD

Customer Service Hotline: 1800-88-0032

Service Centre Operating Hours:

8.30am – 6.00pm (Monday - Friday)

Closed on Saturday, Sunday and Public Holidays

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.

Waranti & Perkhidmatan Pelanggan

IMBAS UNTUK



E-Waranti

Pendaftaran e-Waranti di www.khind.com.my/e-warranty.html

MAYER MALAYSIA SDN BHD

Hotline Perkhidmatan Pelanggan: 1800-88-0032

Waktu Operasi Pusat Perkhidmatan:

8.30am – 6.00pm (Isnin-Jumaat)

Ditutup pada hari Sabtu, Ahad dan Cuti Umum

No. 2, Jalan Astaka U8/82, Bukit Jelutong, 40150 Shah Alam, Selangor D.E., Malaysia.


IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- This product is for household use only.
- Make sure that the marked voltage of this product is in conformity with the input voltage.
- Children are not allowed to use this product without close supervision.
- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's customer experience in order to avoid all risks.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner or in high humidity. Avoid direct sunlight.
- Do not touch the blades until the product is power off and the blades stop working.
- Disassemble appliance and remove motor base when taking out the food.
- When the cover or motor base is not placed, the chopper will not work.
- This chopper cannot be used for chopping frozen food, defrost the food before chopping.
- The blades should be properly placed on the blade axis before filling the bowl with food. If the chopper is found running at abnormal slow speed or not working, please unplug the appliance and check if there is any big object stucked under the blades.
- This product has overheat protection system, in case overwork & overheat, it will power off automatically. Unplug the power and allow the appliance to cool down.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY
MMFC05	3.7V~ 50-60Hz	30W	300ml

INTRODUCTION OF PARTS

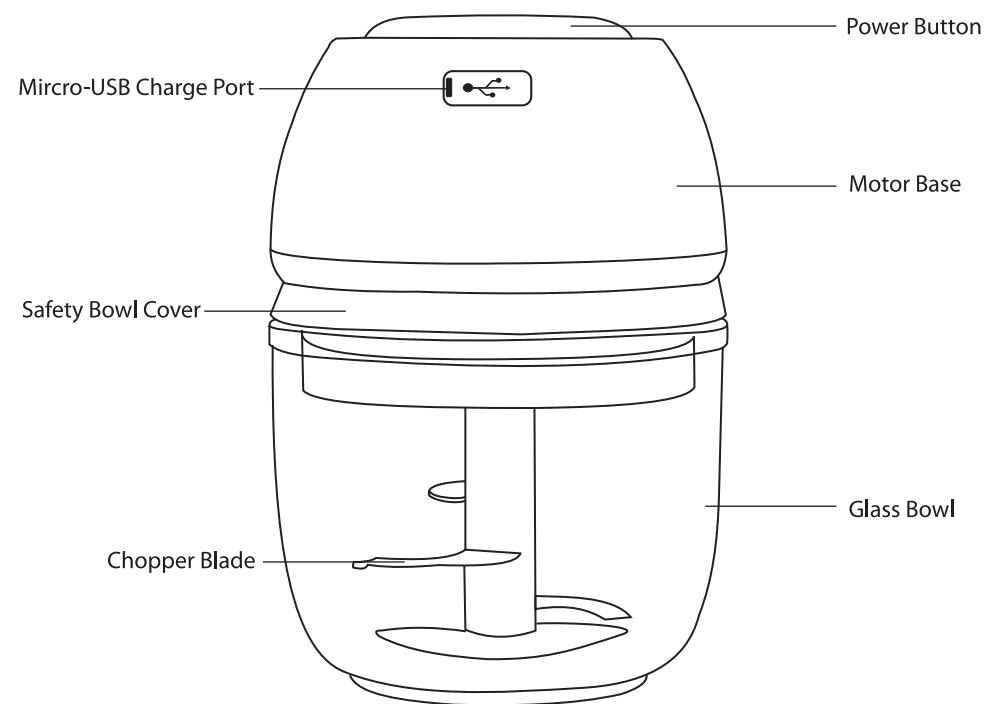

CONTROLS AND OPERATIONS

After unpacking, disassemble the appliance before using for the first time. Refer to "Disassembling of Appliance" for directions.

Wash all parts (all accessories and attachments, excluding the motor base) in warm, soapy water. Rinse and dry immediately. DO NOT IMMERSE MOTOR BASE IN WATER.

Assembling the Appliance:

1. Make sure that the glass bowl is sitting upright on a hard, flat and stable surface.
2. Place the chopper blade in the center of the glass bowl. Ensure that it is inserted and fitted appropriately in onto the blade adaptor.
3. After chopper blade has been installed properly, put the ingredient into the glass bowl.
4. Place the safety bowl cover onto glass bowl, and adjust it until the cover clasps well with the chopper blade center, and fits nicely onto the glass bowl as a cover.
5. Place the motor base on top of the safety cover. Make sure that it is properly clasped to the magnetic switch on the safety cover.
6. Press and hold the power button to start chopping and mixing the ingredients in the appliance.

Operating the Appliance:

- Press the power button and the food chopper will start working.
- Release the button and the food chopper will stop working.
- Continuous short presses and release of the power button creates a pulse effect for the food chopper.
- Press and hold the power button longer to chop and mix ingredients well.

Note:

- Do not touch the chopper blades to prevent hand cuts.
- Children are not allowed to touch this appliance due to safety hazard.
- In case of insufficient power when using the appliance, stop operating and charge the appliance immediately.
- Do not use the appliance while charging.
- If the bowl is not properly assembled, the appliance cannot start to work due to its safety interlock switch feature.

Charging the Appliance

- The recommended charging duration is 3 hours before using the appliance. Do not charge for more than 4 hours, as this might lead to overcharging and damage the appliance.
- When appliance is charging, there will be a red indicator light turned on.
- When the appliance is fully charged, the red indicator light will go off and the blue indicator light will appear.
- If the charger is not removed after fully charged, the indicator light will consume the battery power from the motor based. The appliance will automatically replenish need to and restore back its battery power and go back to charging mode.
- Ensure that the appliance must be fully charged before it can be used continuously.
- Do not operate the appliance while charging, as this will cause damage to it.

Disassembling the Appliance:

1. Ensure that the appliance is not operating and power is turned off before disassembling the appliance.
2. Hold the motor base and twist to remove motor base from safety bowl cover.
3. Lift up safety cover to remove.
4. Pull the blade straight up to unlock and remove it from the glass bowl.

CLEANING AND MAINTENANCE

- Do not immerse or soak the motor base in water or other liquids.
- All removable accessories, attachments, and glass bowl can be cleaned in water except the motor base.
- Dry all the wet parts after cleaning.
- For easy cleaning of the chopper bowl, put some warm water and detergent in the chopper bowl and let it run for a while. Then rinse it with tap water.
- Always place the appliance in a dry and well-ventilated place when not in use.
- DO NOT use hard / solid detergent, or any sharp and abrasive sponge for washing, which may cause scratches on product. Always use a soft and non-abrasive sponge, and wash gently.
- Do not wipe the product with any sharp and abrasive sponge. Always use a soft and gentle cloth when wiping the product
- Ensure that the Micro-USB charging port is covered up and concealed before using and cleaning the appliance.
- Use a soft, gentle, damp cloth when wiping the motor base.
- Once the appliance is thoroughly dried, assemble back the appliance and place it in the original packaging bag after cleaning the appliance to prolong its shelf life.